







 

 

 
 


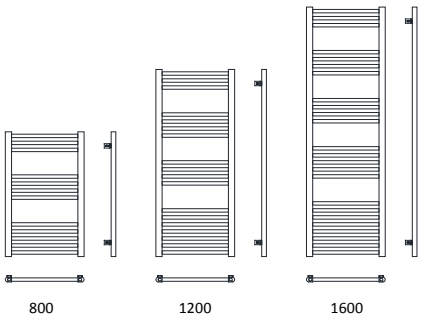




OTTONE INSTALLATION GUIDE

DESCRIPTION	DESCRIPTION	ILLUSTRATION
 <p>Radiator x1</p>	Fixing choose the appropriate fixing for the wall material if required	
 <p>Brackets x4</p>	PTFE tape	
 <p>Wall Anchors x 4</p>	Electric drill	
 <p>Fixing Screws x4</p>	Masonry drill bit appropriate to the fixings	
 <p>Washers x4</p>	Adjustable spanner	
 <p>Security Screws x4</p>	Radiator valve hex key	
 <p>Cross Recessed Countersunk Head Screw X4</p>	Flat head and philips head screw drivers	
 <p>End plug x1</p>	1 lock shield valve and 1 gate or thermostatic valve	
 <p>Air vent x1</p>	Spirit level	
	Measuring tape	

800

1200

1600

HIGHT D	VERTICAL HOLES F	WIDTH A	AXIS B	HORIZONTAL HOLES E
800mm	620mm	505mm	455mm	455mm
1200mm	1020mm	605mm	555mm	555mm
1600mm	1420mm			

This product must be fitted only by a fully qualified installer.

A	The radiator should not be mounted closer than 50mm below any overhanging surface (i.e. shelf) and no lower than 100mm from the floor. Transfer the bracket drill position measurements to the wall.
B	Drill the wall and insert wall anchors (1) (or other suitable fixings).
C	Put the brackets (2) on the wall and screw them to the wall anchors (1) with fixing screws (5) and washers (4).
D	Screw the brackets (7) onto the radiator.
E	Insert brackets (7) into the brackets (2) and tighten the security screws (3).

GENERAL RECOMMENDATION

- Before fitting the radiator it is necessary to wash out the heating system to remove any existing mud, scale, work residues, traces of flux, oil, etc.
- When the system water pH is outside the 5,5-8,5 range and/or when the dissolved is above 0,1mg/litre, it is always needed to protect the heating system components (the radiator is one of these) with a proper chemical treatment compatible with all parts in contact with water (silicon rubber too).
- In order to fit the radiator to the wall, it is necessary to choose the proper fixings for the wall material.
- If the system water exceeds 50°C, please install a warning mark near the radiator to avoid any accidental scalding.
- Clean the radiator surface only with a soft cloth to avoid scratching the finish and do not use chemical agents during cleaning operations. It is prohibited to climb on the radiator.
- Maximum working temperature 95°C, maximum working pressure 8 bar.